


## Dividers and Fittings

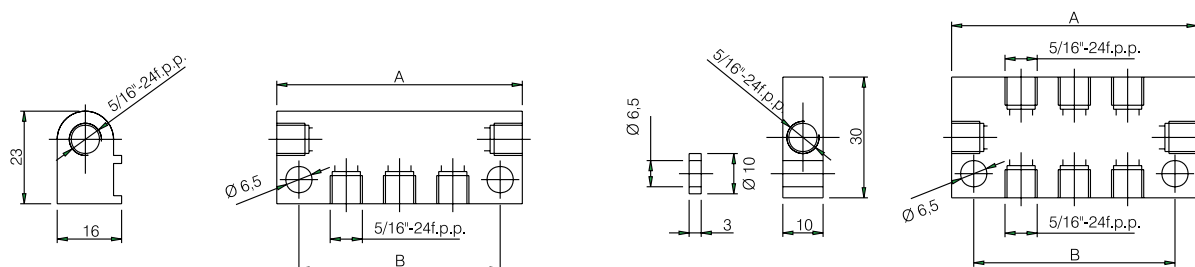

Single-Junction Dividers

| Code | Ref      | Outlets | A   | B   |
|------|----------|---------|-----|-----|
| 5291 | 01.030.0 | 1       | 31  | 20  |
| 5292 | 01.040.0 | 2       | 46  | 35  |
| 5393 | 01.050.0 | 3       | 61  | 50  |
| 5294 | 01.060.0 | 4       | 76  | 65  |
| 5295 | 01.070.0 | 5       | 91  | 80  |
| 5296 | 01.080.0 | 6       | 106 | 95  |
| 5297 | 01.090.0 | 7       | 121 | 110 |
| 5298 | 01.100.0 | 8       | 136 | 125 |
| 5300 | 01.123.0 | 10      | 166 | 155 |

Double-Junction Dividers

| Code | Ref      | Outlets | A   | B  |
|------|----------|---------|-----|----|
| 5301 | 01.504.0 | 2       | 31  | 20 |
| 5202 | 01.506.0 | 4       | 46  | 35 |
| 5303 | 01.508.0 | 6       | 61  | 50 |
| 5304 | 01.510.0 | 8       | 76  | 65 |
| 5305 | 01.512.0 | 10      | 91  | 80 |
| 5306 | 01.514.0 | 12      | 106 | 95 |

## Fittings

By using suitable tube fittings, it is possible to couple 4 mm and 6 mm outside diameter tubes to the same divider and 4 mm outside diameter tubes to secondary lines.

